

ON-SITE OIL ANALYSIS


Our all new **Particle Pal Pro** utilises breakthrough digital imaging technology which provides a greater insight into the size and type of particulate in any oil system. Air bubble elimination and shape recognition gives root cause particle analysis.




FS9V3

Harnessing the power of proven digital imaging technology


We've embedded the latest in particle counting technology into our new Particle Pal Pro series. Giving ISO 4406 counts as well as 4, 6, 14, 21, 38, > 70 micron sizing and bubble elimination. Digital imaging, combined with advanced algorithms, sorts particles into fatigue wear, cutting wear and sliding wear categories to give root cause analysis.

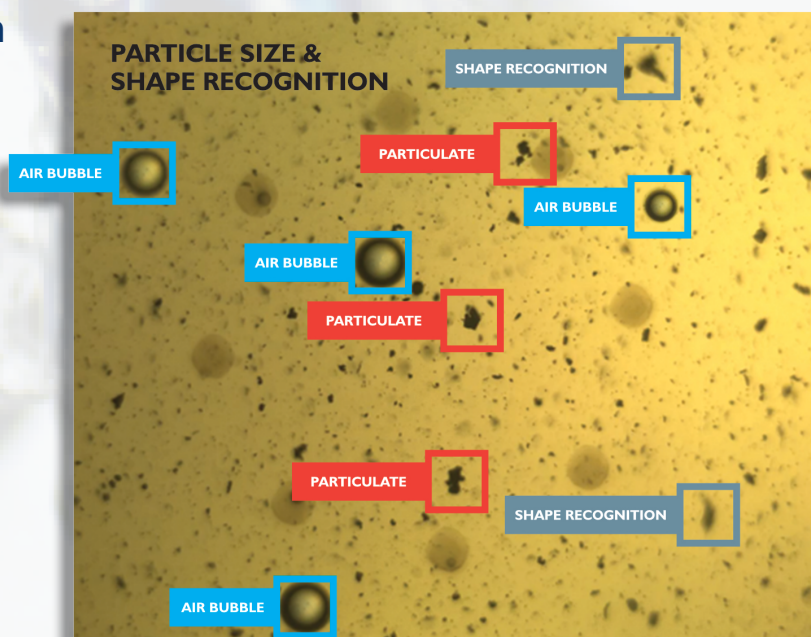

The image above is 4mm x 3mm and shows particulate that the human eye can't see.

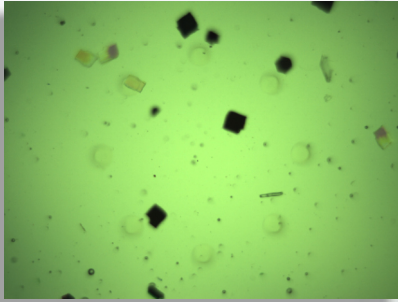


Oil enters the counter for continuous analysis and images periodically captured.

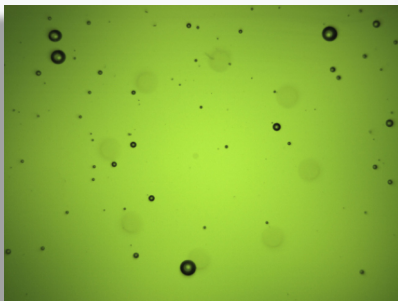

Air bubbles can be seen in images, which are size categorised and removed from particle counts.



Fibres can be visually inspected for analysis of origin.

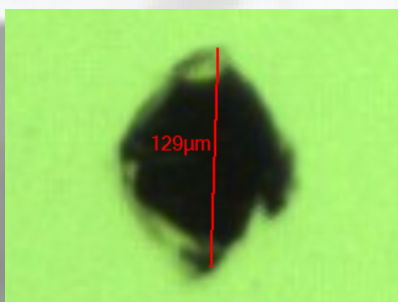


Images can be magnified for analysis and measurements taken.



Digital Imaging Particulate Counter

Capable of broad size determination from 4, 6, 14, 21, 38 > 70 micron counts. Air bubble and water droplet elimination. Shape determination to identify fatigue, sliding or cutting wear as well as fibre identification.



NEW Software

A 10" touch screen LCD allows users to view data in great detail, with zoom, trending and analysis breakdown. Within the software we have embedded oil ageing profiles for over 280 oils. Also included is the ability to self-calibrate an oil life profile, should your oil not be on the database. This is a one time routine where oil is taken through a heat cycle.




Battery Life

Internal rechargeable lithium batteries provide a long life for remote use.



Internal Stepper Motor Pump


We've developed a fully controllable stepper motor driven pump to deliver exact flow rates for any oil, from 1 to 2,400 cSt. The pump also allows connection to a live system up to 350bar via a high pressure adaptor.

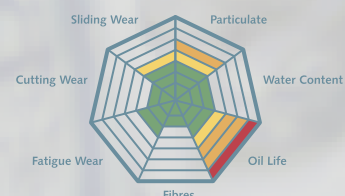

Spider Infographic

A multi-stage infographic helps engineers understand at a glance the condition of their oil, based on all of the data collected from the internal sensors.

PARTICLE PAL PRO SOFTWARE - ALL THE METRICS YOU NEED AT YOUR FINGERTIPS IN AN EASY TO USE SOFTWARE

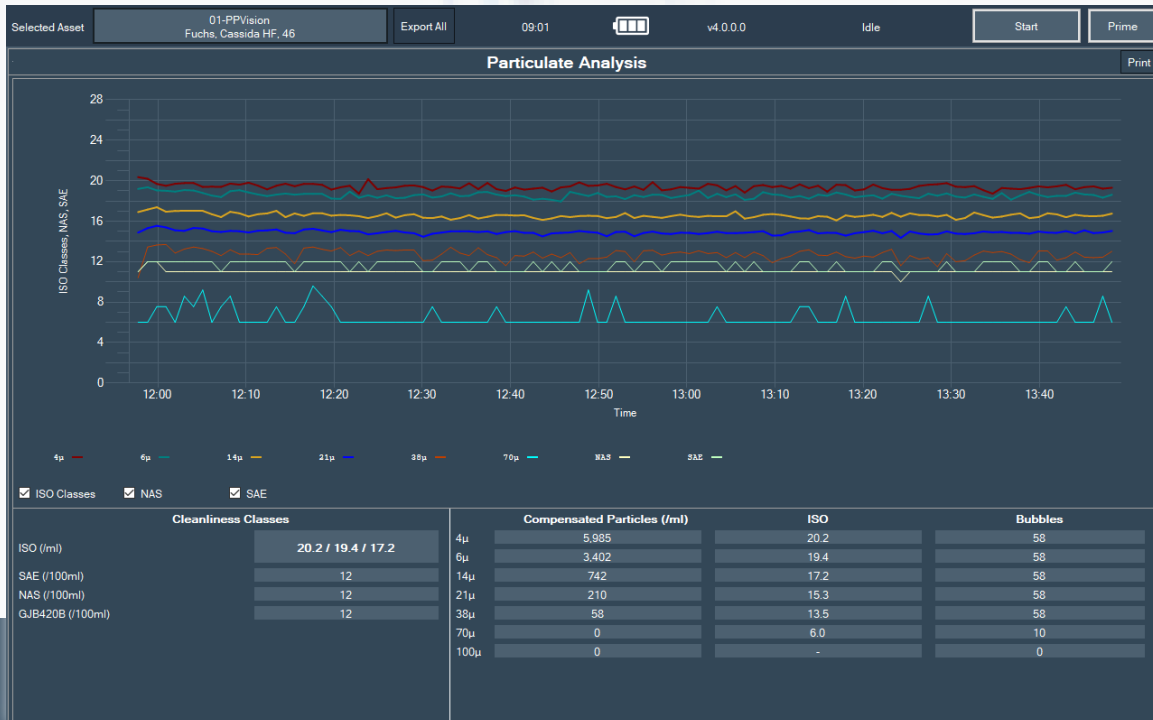

Particulate analysis.

The Atten2 digital imaging particle counter gives advanced size and shape recognition for any sample. Counting particulate in virtually any oil up to 2,400cSt, the Atten2 device also eliminates air bubbles, making it ideal for heavy lube and gear oil applications in cold temperatures. Reporting 4, 6, 14, 21, 38 > 70 micron counts as well as categorising any particle greater than 20 microns into:

- Fatigue Wear • Sliding Wear • Cutting Wear • Fibres

Particle Pal Pro Advanced Oil Analysis - TECHNICAL INFORMATION

Fluid Compatibility	Synthetic oils, organic oils, mineral oils, water glycol & diesel fuel (2,400 cSt viscosity limit)
Display Information	Particulate: ISO 4406, SAE AS4059 & NAS 1638, bubble elimination and particle wear analysis.
Modes of Operation	High pressure live system sampling (up to 350 bar) - via a high pressure adaptor. Bottle sampling and tank sampling.
Data	All data stored locally with an option to export to CSV or PDF.